


SYSTEM DESIGN : Before programming the lock or wall reader, ensure the zones, floors and doors are setup within the software as this data is carried on the "Lock ID card".

RESET the lock or wall reader before programming.  
Press and hold the reset button for 5 seconds until a long beep is heard.

- Program the unit by:
- Present the "SWA Card"
  - Present the "Lock ID Card"
  - Present the "Lock Real Time Card"

Note all actions must occur within 3 seconds of the previous action.  
Feedback will be provided by LED and buzzer indications.

Lock should be tested with a valid user card to verify programming.

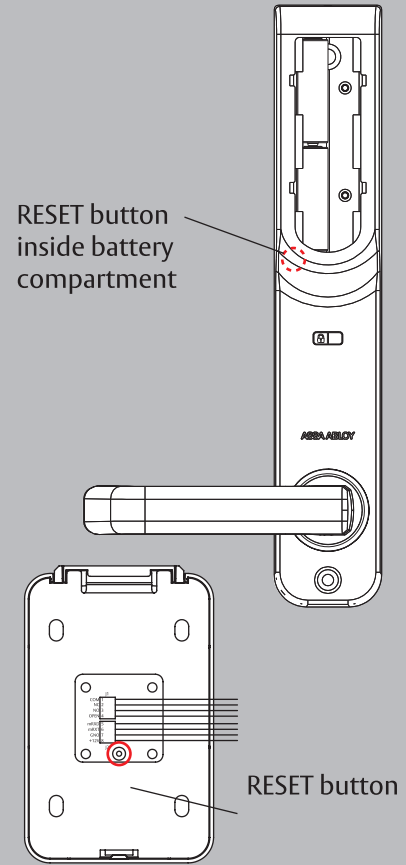

Card Type	Description
SWA Card (RESET Card)	Activates the software and initializes the lock
Lock Real Time Card	Sets door lock time
Lock ID Card	Sets the door lock room number

LED AND BUZZER INDICATIONS

Action	LED operation	Buzzer operation
Valid Card (access granted)	■	■
Lock RESET (while holding button)	■ ■ ■ (5s) ■ ■ ■	■ ■ ■ (5s) ■ ■ ■
SWA Configuration successful	■ ■ ■ ■ ■	■
Lock ID Configuration successful	■	■ ■ ■ ■ ■
Real Time Card registered		■ ■ ■ ■ ■
Low Battery	■ ■ ■ ■ ■	■ ■ ■ ■ ■ ■ ■ ■
Invalid Card (incorrect time)	■ ■ ■ ■ ■	■
Privacy Mode active	■ ■ ■ ■ ■	■ ■ ■ ■ ■ (2x)
Invalid Card (incorrect door, floor or building)	■ ■ ■ ■ ■	■ ■ ■ ■ ■ (3x)
Invalid Card (card voided)	■ ■ ■ ■ ■	■ ■ ■ ■ ■ ■ ■ ■ (4x)
Invalid Card (incorrect system)	■ ■ ■ ■ ■	■ ■ ■ ■ ■ ■ ■ ■ ■ ■ (5x)
Invalid Card (incorrect site)	■ ■ ■ ■ ■	■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ (6x)
Error - RESET required	■ ■ ■ ■ ■	■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ (7x)

