
# INTEGRAL WALL READER INSTALLATION GUIDE AND USER MANUAL

ITGL-WR-121(1)

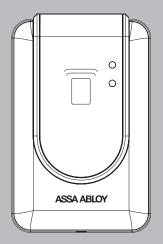


## INTEGRAL WALL READER AND MOUNTING PLATE

Colour: Black
Material: ABS
Voltage: 12VDC
Max switched current: 1A

Card type: Mifare 1

## **WIRING DIAGRAM**

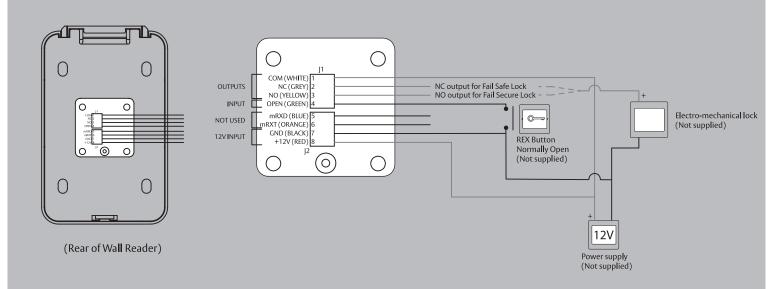

## INSTALLATION, PROGRAMMING AND OPERATION

### INSTALLATION

Feed required cabling through opening in mounting plate and then secure mounting plate to wall using appropriate fixings.

Terminate wiring as per wiring diagram to suit specific application.

Secure wall reader to mounting plate using screw from underside of reader.

## **PROGRAMMING**

Refer to programming guides.

### **OPERATION**

After presenting a valid card to the reader, a green light and single beep will confirm access and a 5 second unlock signal will be provided to the lock.



