

* FOR MAXIMUM CURRENT DRAW PER OPERATOR, SEE PRODUCT SPECIFICATION OR INSTALLATION INSTRUCTIONS. POWER ADAPTOR TO BE INSTALLED PER NFPA 70/NEC REQUIREMENTS AND/OR AHJ